

#### **Models:**

SOLREG-PWM20

#### **Important**

Please be sure to read and save the entire manual before use. Misuse may result in damage and/or cause harm or serious injury. Read the manual in its entirety before using the unit and save the manual for future reference.



### Contents

GENERAL INFORMATION & SAFETY INSTRUCTIONS	4
BOX CONTENTS	
PRODUCT DIAGRAM	4
BEFORE FIRST USE	5
ALADNINGO O CAPETTU INFORMATION	
WARNINGS & SAFETY INFORMATION	
FEATURES	
SYSTEM CONNECTION	
DISPLAY / SETTING	<i>6</i>










#### Browsing Interface

Press menu to browse different interface.



Ploat or CV Voltage

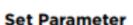

In interface 2-5, long press menu to enter setting and use [up] [down] to set the parameter, long press menu again to exit. Long press [down].



Discharge Reconnect





Discharge Stop



Battery Type





Work Mode




- Press the [down] button to on/off load manually at main display.
- 2. The work mode is working as below:

[24H] Load output 24 hours

[1-23H] Load on after sunset and closed after setting hours [OH] Dusk to dawn

.....6

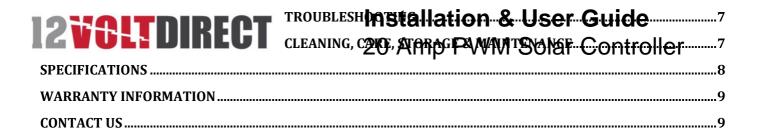



#### **GENERAL INFORMATION & SAFETY INSTRUCTIONS**


- Please read the entire manual before using your solar charge controller
- Retain this manual for future reference
- Inspect unit and all cables for any damage before each use
- No energy source other than solar panels should be connected to the solar charge controller
- Use only with 12V solar panel with a 12V battery or 24V solar panel with a 24 battery
- Do not attempt to disassemble or open the unit
- Keep children away from PV systems
- Never open the device
- Do not leave it outside with the solar panel. It is moisture-proof.

WARNING: The manufacturer is not responsible for any potential injury from misuse

#### **BOX CONTENTS**

1 x 20A PWM solar controller

#### PRODUCT DIAGRAM

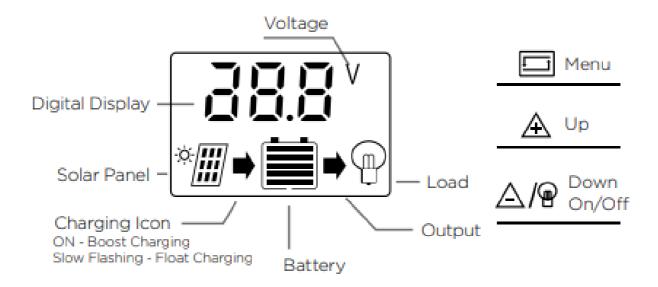

Menu: Switch between different display, or to enter/exit setting by long press.
Up: Press to increase value. Down: Press to decrease value.



#### **BEFORE FIRST USE**

Prior to using your product, please read all the safety and operating instructions thoroughly. Please ensure you follow the steps below before using the product. We recommend you keep the original packaging for storing the product when not in use.

Please pay close attention to the section entitled General & Safety Information. Find a safe and convenient place to keep this instruction manual for future reference.

Unpack the product but keep all packaging materials until you have made sure your new product is undamaged and in good working order. Ensure you have all accessories listed in this manual. Plastic wrapping can be a suffocation hazard for babies and children so ensure all packaging materials are out of their reach.

#### **WARNINGS & SAFETY INFORMATION**

- Make sure your battery has enough voltage for the controller to recognize the battery type before first installation.
- The battery cable should be as short as possible to minimize voltage drop.
- The regulator is suitable for lead acid batteries (Flood, AGM, GEL) and lithium, (please set the controller to the correct battery type) it is not suited for any other battery type.
- The charge controller is only suitable for regulating solar panels. Never connect another charging source to the charge controller.
- The controller will heat up when in use, Please install the controller on a smooth, well-ventilated surface.

#### **FEATURES**

- Supports GEL, AGM, flooded & Lithium batteries.
- PWM control technology
- 3-stage charging
- Backlit LCD screen
- Dual USB Ports

#### SYSTEM CONNECTION

- 1. Connect the battery to the charge regulator-plus and minus.
- 2. Connect the solar module to the regulator-plus and minus.

NOTE: The reverse order applies when disconnecting! Improper sequence order can damage the controller.



### **DISPLAY / SETTING**



Main Display




#### **Browsing Interface**

Press menu to browse different interface.



Ploat or CV Voltage



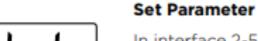

In interface 2-5, long press menu to enter setting and use [up] [down] to set the parameter, long press menu again to exit. Long press [down].



Discharge Reconnect





Discharge Stop



Battery Type





Work Mode



- 1. Press the [down] button to on/off load manually at main display.
- 2. The work mode is working as below:

[24H] Load output 24 hours

[1-23H] Load on after sunset and closed after setting hours [OH] Dusk to dawn



#### **TROUBLESHOOTING**

Problem	Cause	Solution	
Charge icon not on when sunny	Solar Panel disconnected or polarity reversed	Reconnect solar panel, correct polarity	
Load icon is off	Wrong mode setting	Reset	
	Battery voltage low	Recharge battery	
Load icon flashing slowly	Overload	Reduce load watt	
Load icon flashing quickly	Short circuit prevention	Auto reconnect	
Power off	Battery voltage low / polarity reversed	Check battery / connection	

### **CLEANING, CARE, STORAGE & MAINTENANCE**

- While the controller is maintenance-free we strongly suggest that all components of the PV system are checked by a certified technician at least annually.
- Store in a cool dry place when not in use. Ensure all connections are kept free of dirt, grit and corrosion.
- If needed wipe clean with a lightly dampened cloth and allow all components to fully dry before



### **SPECIFICATIONS**

Contain Valle no	101//041/ 4	L _	
System Voltage	12V/24V Au	to	
Charge Current	20A		
Discharge Current	20A		
Max Solar Input	<50V		
Battery Voltage	b1 (12/24V), 1b1 (12V), 2b1 (24V): lead-acid battery 14.4V		
Float Charge	13.7V (default, adjustable)		
Discharge cut-off voltage	10.7V (default, adjustable)		
Discharge recovery voltage	12.6V (default, adjustable)		
Battery Type Ternary Lithium	b2 (3.7V*3 / 6) 12/24V auto	1b2 (3.7V*3) 12V	2b2 (3.7V*6) 24V
Battery Type LifePo4	b3 (3.2V*4 / 8) 12/24V auto	1b3 (3.2V*4) 12V	2b3 (3.2V*8) 24V
Constant Voltage	(3*3.7V):12.6V (6*3.7V):25.2V (4*3.2V):14. 4V (8*3.2V):28.8V		
Discharge recovery voltage	(3*3.7V):11V (6*3.7V):22V (4*3.2V):11. 6V (8*3.2V):23.2V		
Discharge cut-off voltage	(3*3.7V):10V (6*3.7V):20V (4*3.2V):10.4V (8*3.2V):20.8V		
USB output	5V/2A		
Self-consumption	<10mA		
Operating temperature	-35 ~ +60°C		



#### WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, We will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

#### **CONTACT US**

12 Volt Direct

Unit 13, 32-38 Belmore Road North, Punchbowl NSW Australia 2196

02 9191 7359 | www.12voltdirect.com.au | info@12voltdirect.com.au